

Model No.

Gear Box + motor

Direction Gear Box for R/C

(1). JIAJIA factory

B28 (6V)	3-9V 550 11000RPM	6V 380 8000RPM
B28 (12V)	6-12V 550 9000RPM	12V 380 3500RPM
JJ012A (12V)	6-12V 550 9000RPM	12V 380 3500RPM
JE128 (12V)	6-12V 550 9000RPM	12V 380 3500RPM
JE118 (6V)	3-9V 390 18000RPM	6V 280 16000RPM
JJ205 (12V*2)	6-12V 550 9000RPM	12V 380 3500RPM
JJ215 (12V)	6-12V 550 9000RPM	12V 380 3500RPM
JT014 (6V)	3-9V 390 13000RPM	
A26 (12V)	6-12V 550 9000RPM	
JS318 (12V)	6-12V 550 9000RPM	
JS007 (6V)	3-9V 550 11000RPM	
A30 (6V)	3-9V 550 11000RPM	6V 380 8000RPM
JE108B (6V)	3-9V 550 11000RPM	6V 380 8000RPM
JE108B (12V)	6-12V 550 9000RPM	12V 380 3500RPM
JE168 (6V)	3-9V 550 11000RPM	6V 380 8000RPM
JE168 (12V)	6-12V 550 9000RPM	12V 380 3500RPM
JT528	6-12V 550 9000RPM	
JJ299	6-12V 550 9000RPM	12V 380 3500RPM
JJ288 (12V)	6-12V 550 9000RPM	12V 380 3500RPM

(2). Dongma factory

DMD-G55	12V 550 9000RPM	12V 380 5600RPM
DMD-158	12V 550 9000RPM	12V 380 5600RPM
DMD-168	12V 550 9000RPM	12V 380 5600RPM

(3). HengTai factory

without printing RPM

HT-99852



(4).Rastar factory

81400

12V 550 7500RPM

12V 280 8000RPM